 


POWER OUTAGE?

HOW TO DISENGAGE YOUR GARAGE DOOR OPENER

STAY CALM

Take a breath and relax. Power outages are often temporary, lasting just minutes. Wait 10–15 minutes to see if the power returns before taking action.

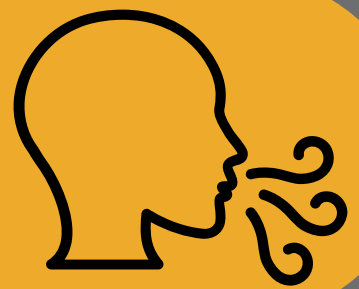

FIND MANUAL OVERRIDE

Locate the manual override mechanism in the garage. Enter through another door, find the red-handled rope hanging from the garage mechanism, and pull it forcefully to disengage the opener.



 
OPEN THE DOOR MANUALLY

After disengaging the opener, lift the garage door manually. Ensure it opens smoothly without resistance.



SECURE WITH A MANUAL LOCK

If the power outage persists, engage the garage door's manual lock or deadbolt. This prevents unauthorized access and keeps your home secure.

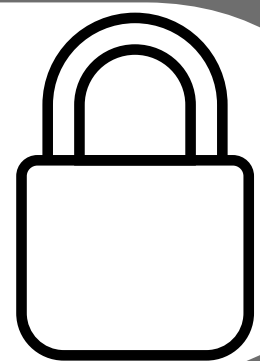

WAIT FOR POWER TO RETURN

When the power comes back on, give it 30 minutes to stabilize before re-engaging the garage door opener.



 
RE-ENGAGE OPENER VIA HANDLE

Return to the emergency override handle and pull it to reconnect the opener. Ensure it clicks back into place.




TEST WITH REMOTE

If re-engagement doesn't work, use the remote. Press "close" (even if closed) and then "open." Run a full cycle to reset the system.

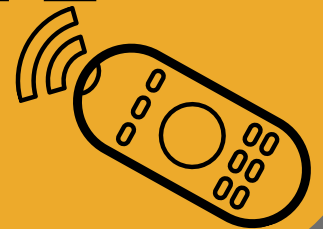

RESUME NORMAL OPERATION

 Ensure the door opens and closes smoothly using the remote. You're now ready to use your garage door as usual.

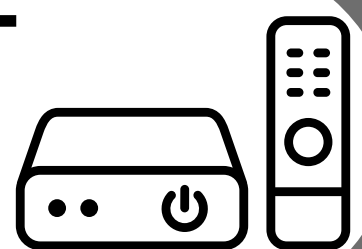

C & M Garage Doors